



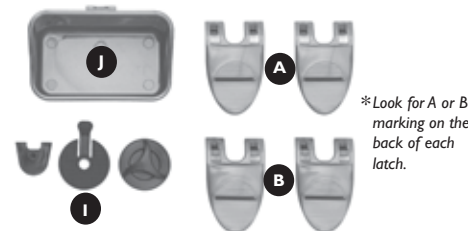

Habitat Defined Rabbit Habitat

Home measures 41.25" L x 18" W x 22.25" H
without Stand 31.5" H with Stand
Assembly Instructions

DESCRIPTION	MATERIAL NO.	UPC
Habitat Defined, Rabbit	I00501971	045125592368

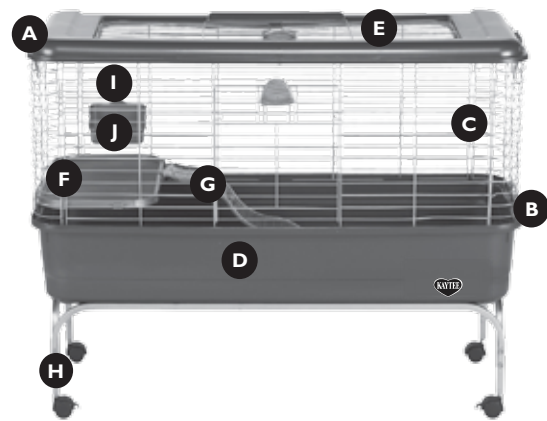

*Look for A or B marking on the back of each latch.

Important:

Carefully Unpack and Sort All Components on the Parts List

QTY.	KEY	DESCRIPTION
2	A	Latch Top
2	B	Latch Base
1	C	Wire Set
1	D	Base
1	E	Rooftop
1	F	Comfort Shelf 18"
1	G	Safety Ramp 16"
1	H	Stand with Casters
1	I	Accessory Pack, 3 Piece
1	J	Food Dish

If your new pet home has experienced damage during shipping, please do not return your cage to the store.

Our Customer Service Department is available to help with any problems. Our Toll-Free Number (within the USA and Canada only) is 800-255-4527, Monday - Friday from 8:00 a.m. to 4:00 p.m. (Central Standard Time).


SAVE YOUR INSTRUCTIONS FOR FUTURE REFERENCE

Manufactured by: KAYTEE Products, Inc., Chilton, WI 53014 USA
©2017, 2018 KAYTEE Products, Inc.
Made in the USA of US and Imported Parts
Kaytee and Kaytee with design are registered trademarks of Kaytee Products, Inc.
For more information on bird and small animal products, visit us at kaytee.com

PP1006317

STEP 1 Unwrap Wire Panel Sets

Unwrap the Wire Panels and lay on a flat surface with the doorways facing upward.

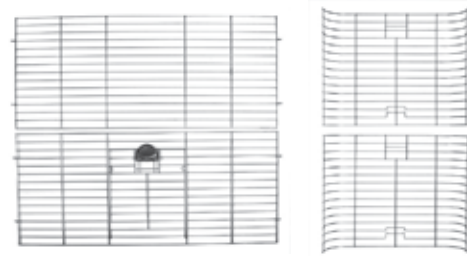


STEP 2 Attach Side Panels

Position the Left Panel and Right Panel so that the Bent Notch is on the Bottom of the panel.

Lock the Back Panel onto the Right Panel by attaching the Wire Hooks. The Wire Hooks must be positioned between the notches as pictured:


When the Horizontal Wire notch dips downward, the Wire Hooks must be placed above the dip. When the Horizontal Wire Notch slants upward, the Wire Hooks must be placed below the slant.

Special Note: If the Wire Hooks have become bent during shipping, carefully pry them open with a flathead screwdriver, so they can bend around the Wire Beams.

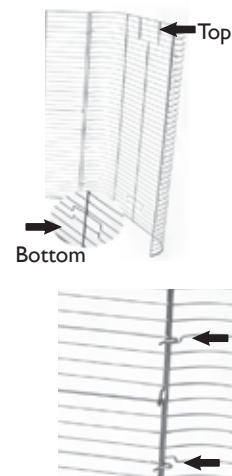

STEP 3 Attach Side Panels to Back Panel

Lock the Back Panel onto the Left Panel by attaching the Wire Hooks. Again, the Wire Hooks must be locked between the notches, as explained in Step 2.

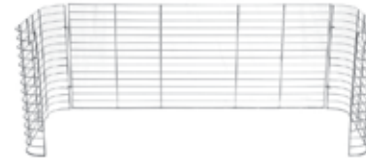


STEP 4 Attach Front Panel to Side Panels

Position the Front Panel so that the Doorway opens down and outward. Lock the Front Panel onto the Right Panel by attaching the Wire Hooks. The Wire Hooks must be locked between the notches.




STEP 5 Lock Front Panel to Side Panels

Lock the Front Panel onto the Left Panel by attaching the Wire Hooks. The Wire Hooks must be locked between the notches, as pictured:

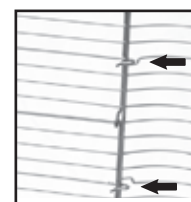


STEP 6 Attach Safety Ramp

Bend the clip-side of the Safety Ramp (G) to increase the Ramp's flexibility. It is normal for a white line to form on the ramp once bent. Attach the Safety Ramp (G) to a Comfort Shelf (F) by snapping the Ramp's clip onto the Shelf. Snap the Bottom portion of the clip first, followed by the top portion of the clip.

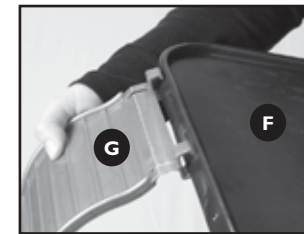

STEP 7 Attach Comfort Shelf

Position the assembled Safety Ramp (G) and Comfort Shelf (F) on the 2nd wire beam from the bottom on the left side of the assembled wire set. Push down on the Comfort Shelf above the attachment brackets on the Wire until the Comfort Shelf snap-locks into place.

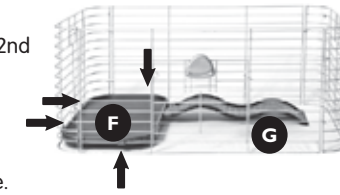


STEP 8 Attach Wire Set to Base

Place the assembled Wire set (C) with assembled Safety Ramp (G) and Comfort Shelf (F) on top of the plastic Base (D), so that the sticker on the Base and the door opening faces the front.



STEP 9 Secure Wire to Base

Attach the Base Latches (B), marked with the letter onto each side of the home. Be sure to snap the Latches under the lip on the plastic Base to secure the cage.

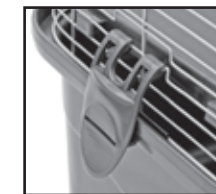

*Look for marking (B) on the back of each latch.

STEP 10 Attach Rooftop to Wire


Place the plastic Rooftop (E) with Doorway latch facing front on top of the assembled wire set, by locking the Wire Beams into and under the 8 Rooftop Catch-Clips.



Special Note: The Wire Beams should be slightly visible when looking downward at the Catch-Clips in the plastic Rooftop with Doorway.

STEP 11 Secure Rooftop to Wire

Attach the Top Latches (A) on each side of the home. Be sure to snap the Latches through the horizontal Wire Beam to secure the cage.

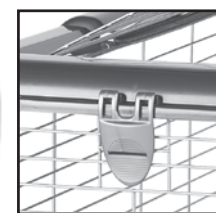


* Look for marking (A) on the back of each latch.

STEP 12 Attach Food Dish

Attach the Habitat Defined™ Food Dish (J) above a Comfort Shelf with Wavy Ramp. To attached the Food Dish (J) to the Habitat, assemble Accessory Pack, 3-Piece (I) to the Wire. Next, position the Quick Release Washer onto the Bolt Clip with textured surface facing out. Insert assembly through wire and secure into place with Nut.

To remove the Habitat Defined™ Food Dish for filling, simply push the Quick Release Tab and slide the dish upward.

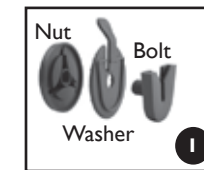

STAND ASSEMBLY

STEP 13 Attach Stand Rails

Attach the Stand's Long Front/Back Rails to the Short Side Rails by screwing the Front/Back Rails into the Short Side Rails.



Place the 8 screws through the drilled holes and twist on the Locking Nut. To tighten, use the Wrench.

STEP 14 Attach Casters

Screw the Casters onto the four legs, using the provided Wrench to tighten. Place two Locking Casters on the back legs and two Non-Locking Casters on the front legs.



STEP 14 Place Assembled Home on Stand

Place the assembled Habitat Defined™ Home onto the assembled Stand set.



SAFETY

Front Door and fully opening top door provides easy access to your pet and encourages bonding. Spring loaded door locks



CLEANING

To clean your pet's home, simply unsnap the Wire Panel Set (C) from the Plastic Base (D). Empty and wash the Plastic Base or spray with Kaytee® Clean Cage (Item # 100079553), wipe dry, refill with fresh bedding material, and replace the Wire Panel Set onto the Plastic Base. Kaytee® Clean Cage neutralizes odors, safely cleans surfaces, and is non-toxic to all pets.